




Husqvarna Attachments

Non-collect kit RC 300 599453501 C103, 599453502 C112


Non-collect kit RC 300
599453501 C103, 599453502 C112

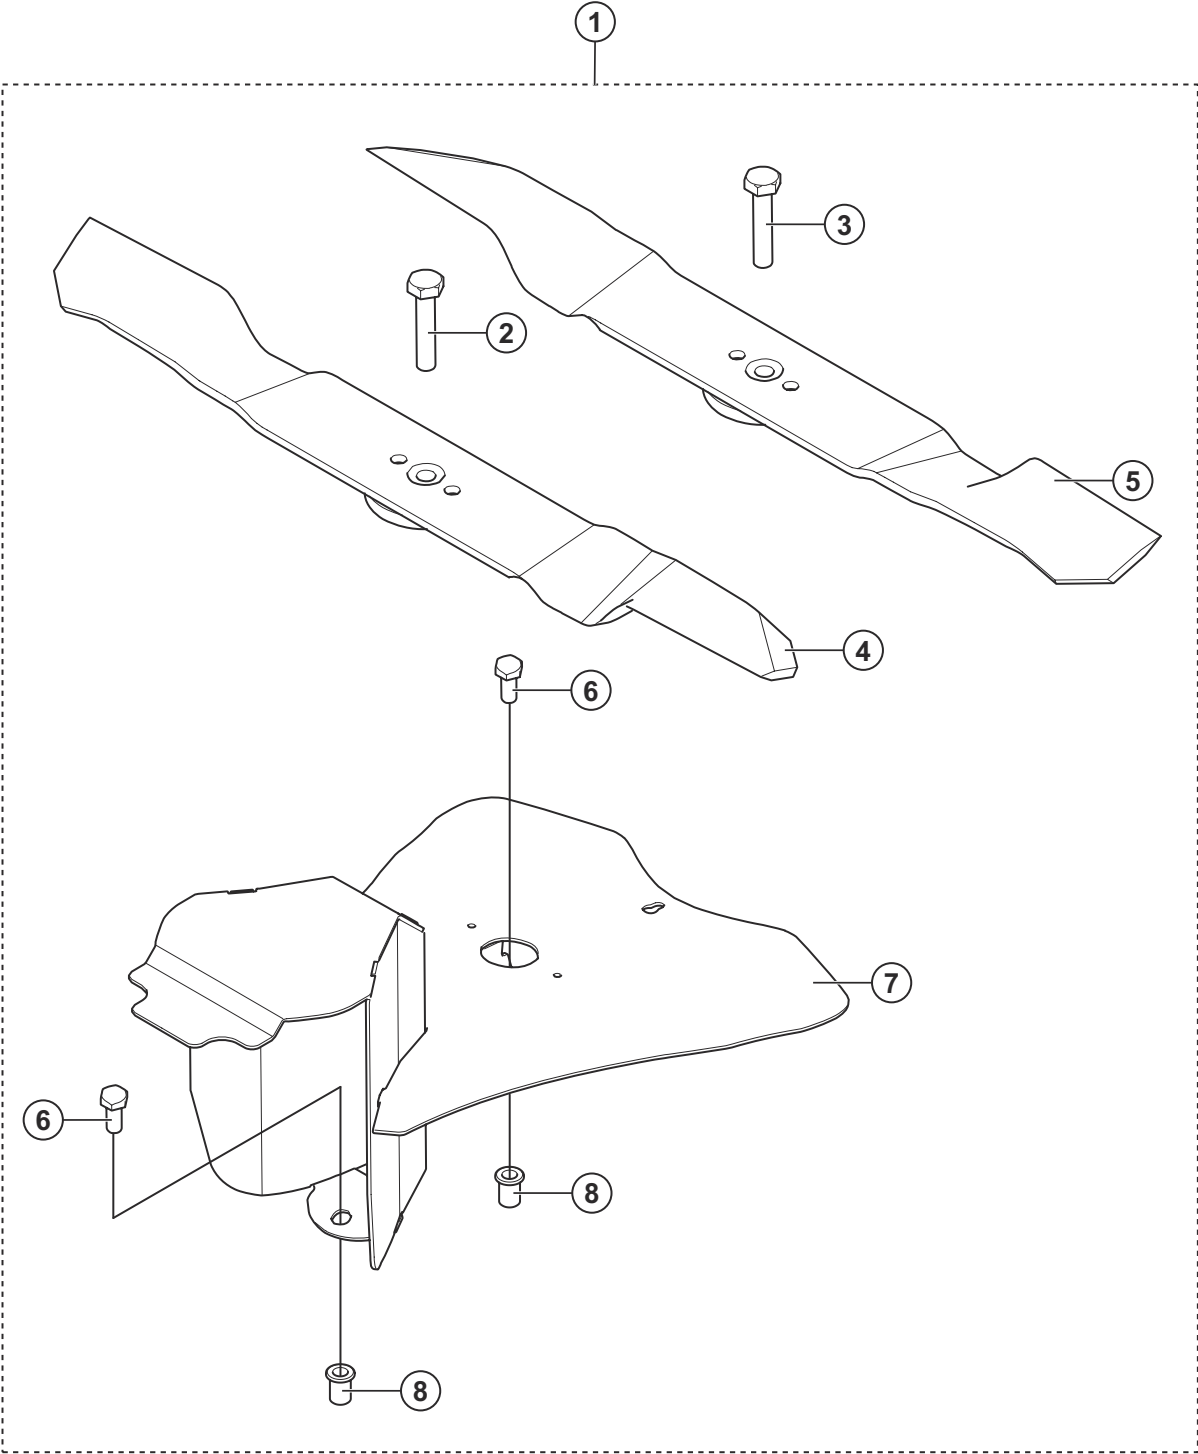


Pos	Name	Qty
1	NON COLLECT KIT – RC 103	1
2	SCREW, LH	1
3	SCREW	1
4	BLADE, Right	1
5	BLADE, Left	1
6	SCREW EHHM	2
7	PLUG	1
8	RIVET NUT	2

Pos	Name	Qty
1	NON COLLECT KIT – RC 112	1
2	SCREW, LH	1
3	SCREW	1
4	BLADE, Right	1
5	BLADE, Left	1
6	SCREW EHHM	2
7	PLUG	1
8	RIVET NUT	2


1






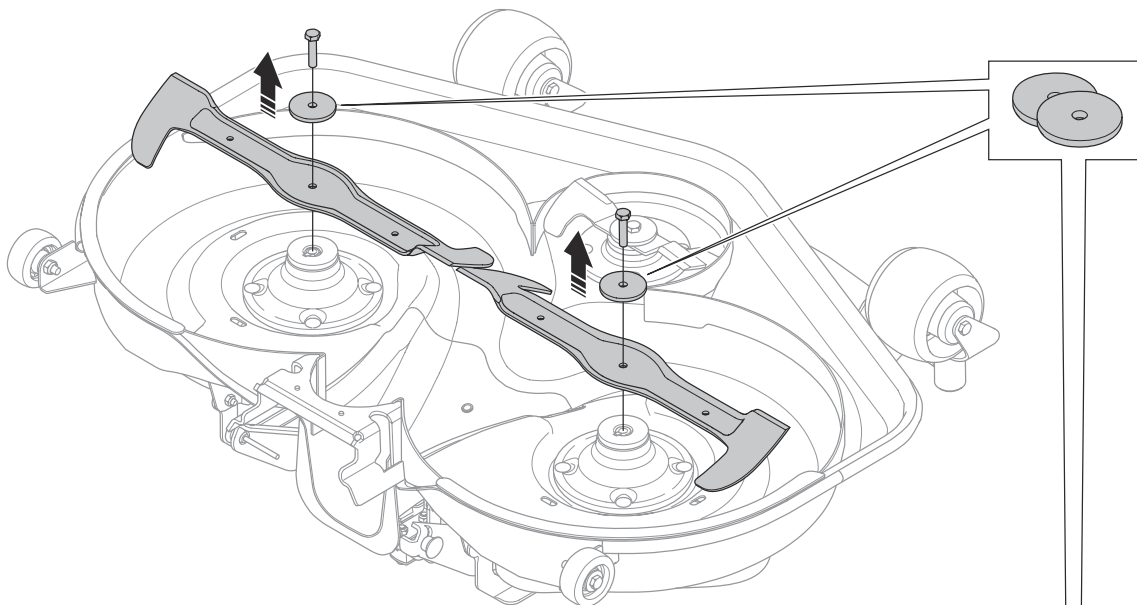


2

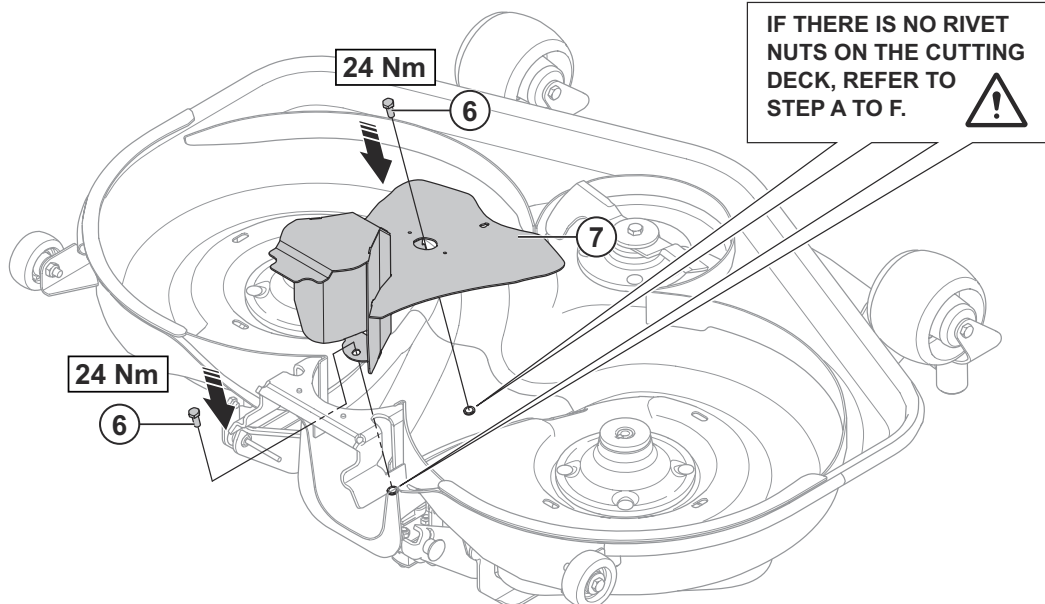

3

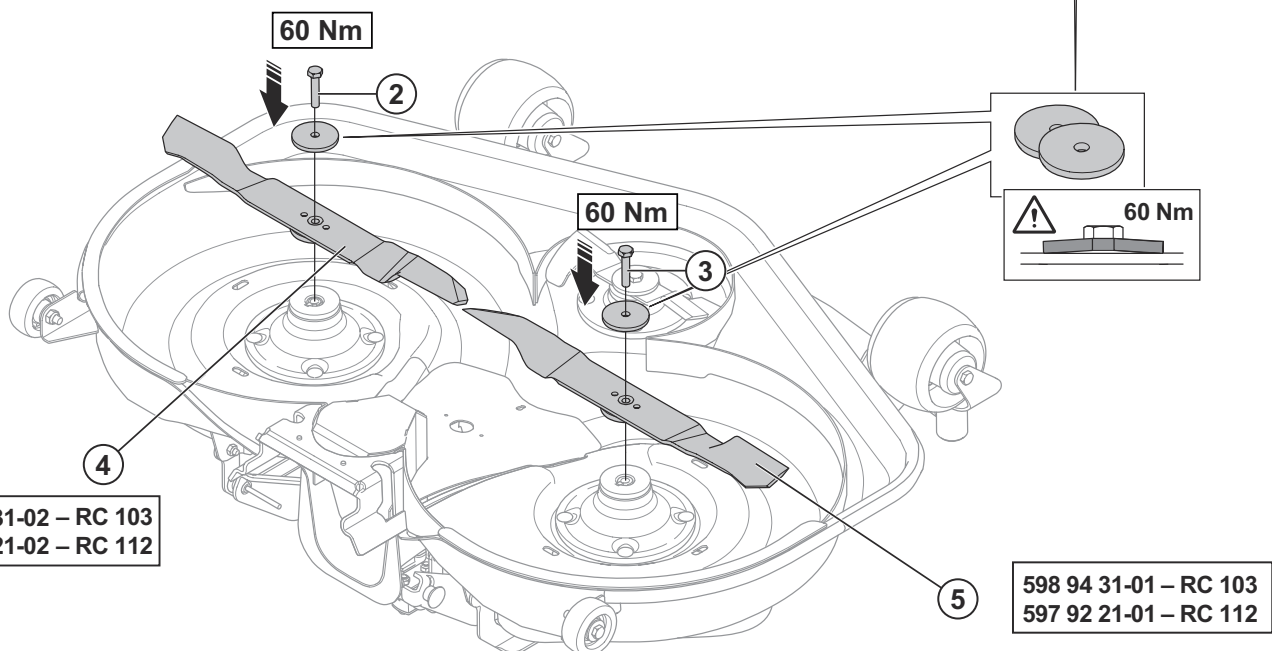

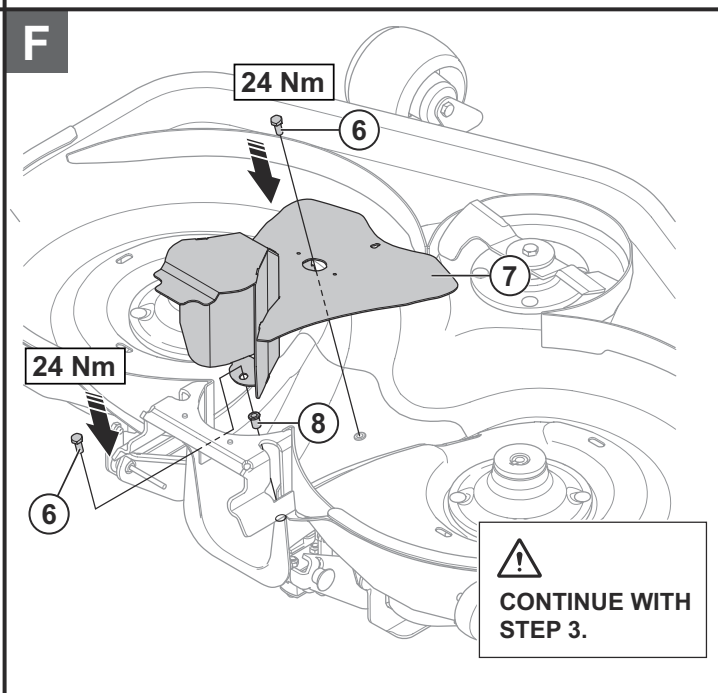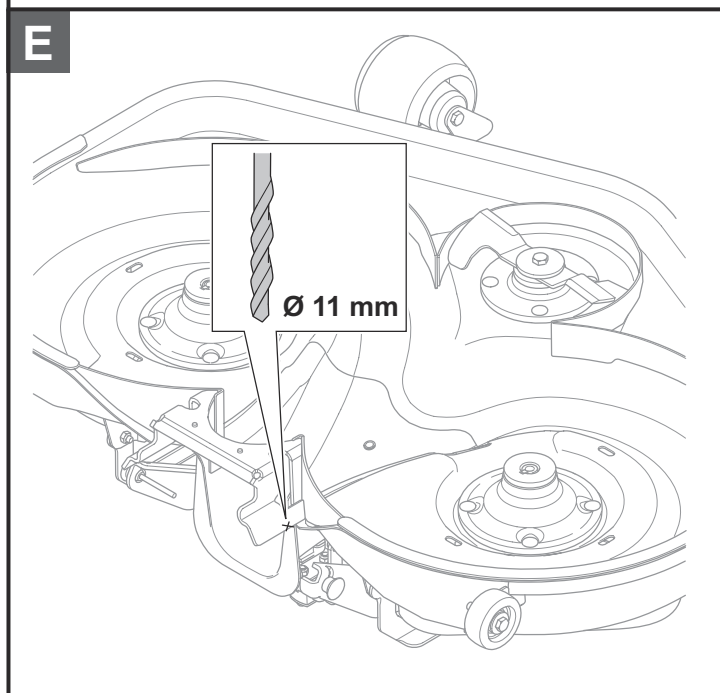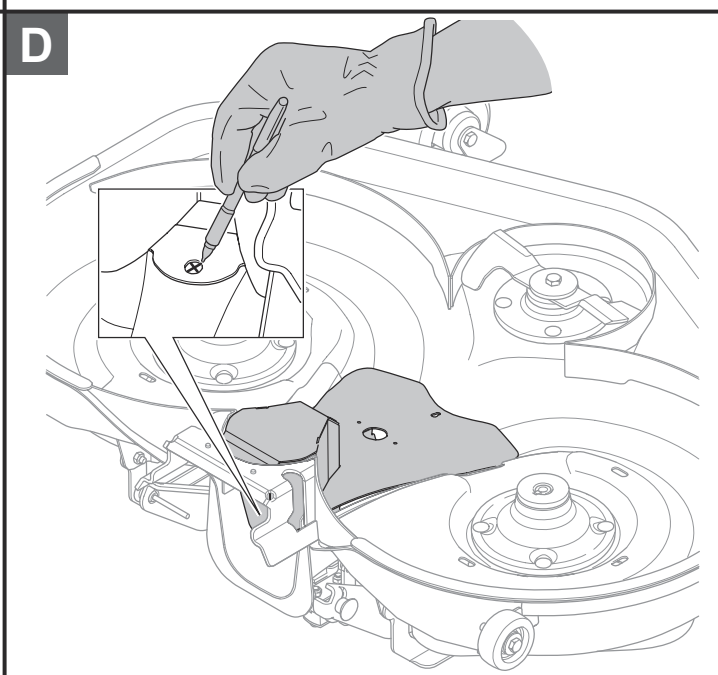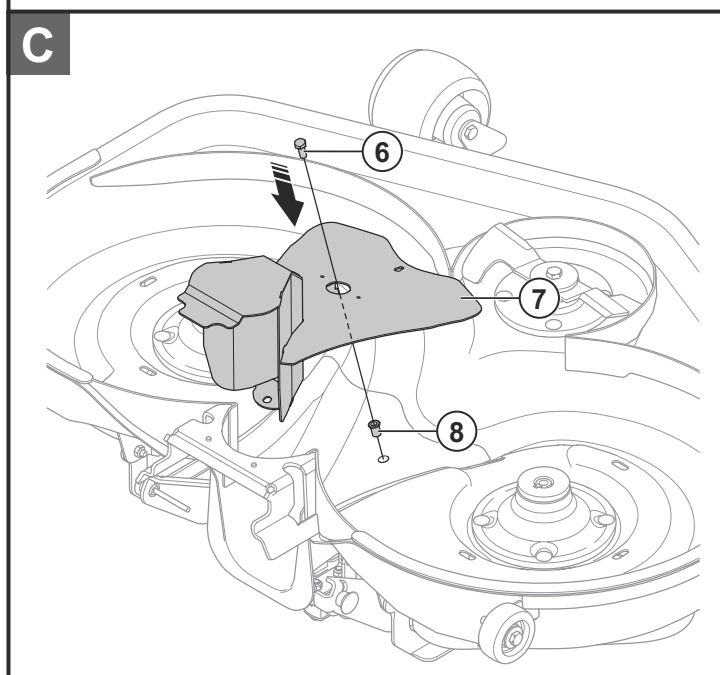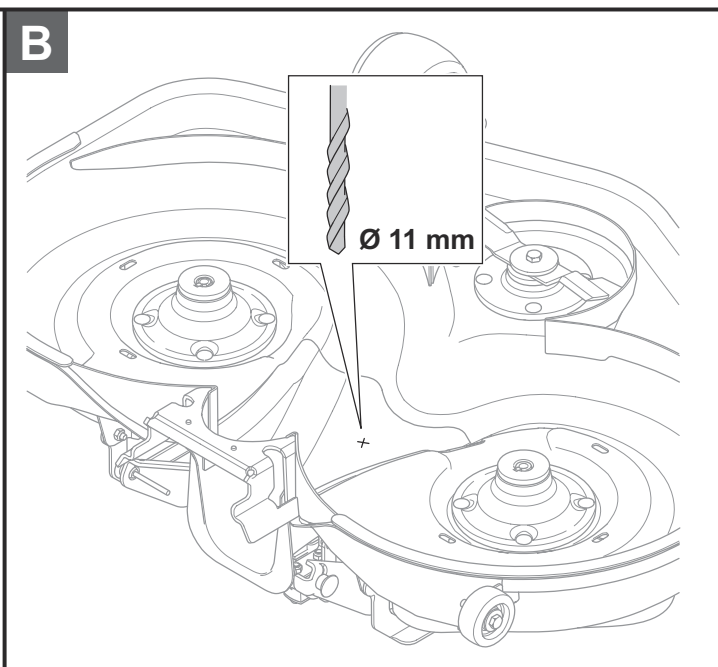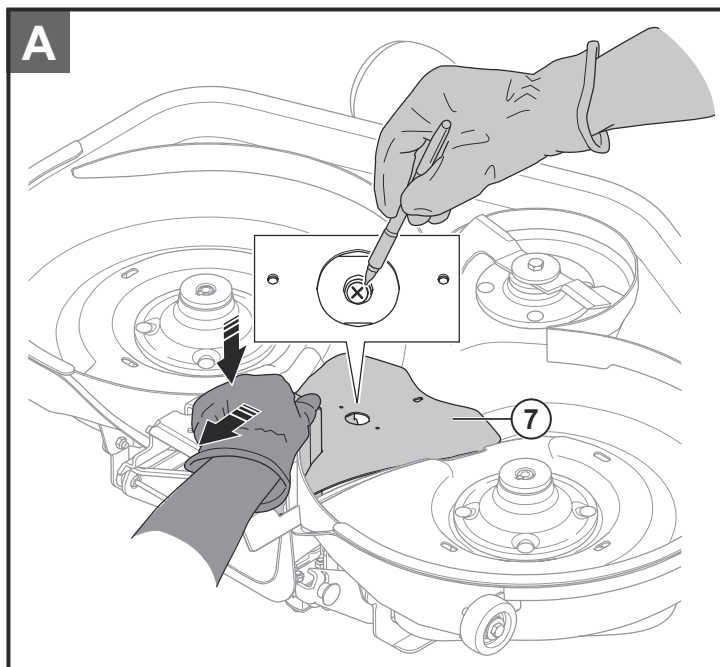



FR

Cet appareil
se recycle

À DÉPOSER
EN MAGASIN

OU

À DÉPOSER
EN DÉCHÈTERIE

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Husqvarna®

www.husqvarna.com

Original instructions



599468201



2024-06-26